

 $OG6250_{\text{\tiny TM}}$



Hello.


Congratulations on purchasing your new OGAWA OG-6250.

At OGAWA, we understand every body is different and have carefully designed our massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.

Assembly Instructions

The OG-6250 Massage chair arrives in 3 boxes.

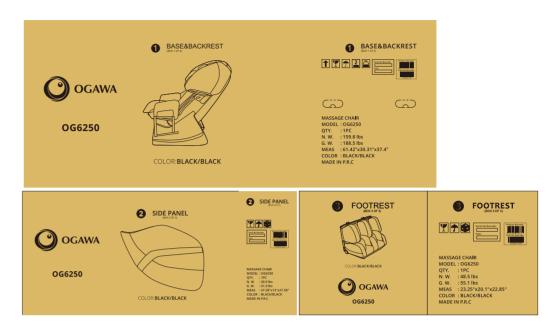

Open box 1 and remove all contents. Remove the packing materials. Take the chair out of the box. Collect all the accessories and put them aside.





Adjust chair position. Use the power cord to connect the chair to the power supply and turn on the power switch. The chair will go back to home position. Then disconnect the power cord.



Remove cotter pins and bolts from the chair base. Locate the two cotter pins and bolts on the chair base. Locate the cotter pin and bolt on the link rod. Take them off and put them aside.



Open box 3 with footrest. Move footrest close to the chair. Engage the link rod with footrest joint, and then insert the bolt and lock with the cotter pin.



Connect wires in footrest. Connect both footrest wire connectors and screw the caps tight. Then connect the air hose.

Caution: After the wire connectors have been connected the cap must be screwed tight.






Fully connect the footrest to the base. Move the footrest close to the chair. Engage the joints of the footrest and the base. Lift footrest up to align the holes on the joints, then insert the bolt and lock it with cotter pin (that you had set aside).














Attach the side board. Move the side boards close to the chair and connect the air hose.




Locate the bolt on the rear of theside board and the clip on the backrest.

Engage the bolt into the clip; meanwhile let the pothooks of the side board catch the frame on the base, then slide the sideboard onto the chair.

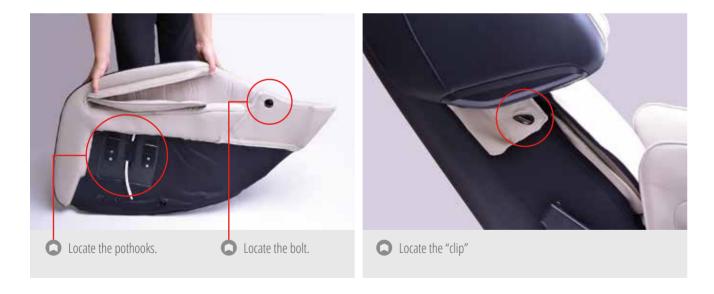

Attach the side board. Use the two socket hexagon head screw to fix the side board. Then zip the zipper.

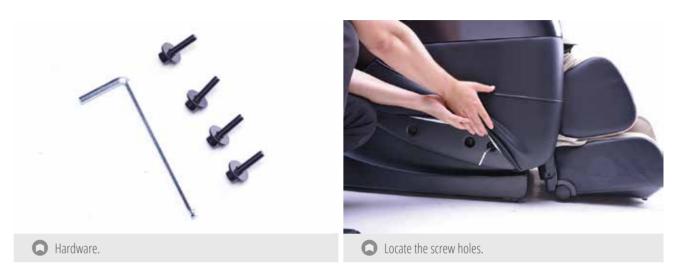



Attach the remote control holder. Remove the screw from the remote control holder. Insert the remote control holder into the base support, and then lock it with the screw. Now insert the touch pad remote control into the holder.



Connect the chair to power supply and turn on the power switch. Now your massage chair is ready to go!



