

SIMPLICITY® SE/LE MODELS

Specifications

Unless Specifically Noted, Specifications refer to both LE and SE Models.

Overall Dimensions: Simplicity SE – 57” L (145 cm) x 34.5” W (88 cm) x 54” H (137 cm)
Simplicity LE – 57” L (145 cm) x 45.5” W (116 cm) x 55.5” H (141 cm)

Refer to Installation Drawings for additional details.

Dimensions Seat to Floor: Simplicity SE – 23” (58 cm) Simplicity LE – 25” (63.5 cm)

Suggested Minimum Distance from Back Edge of Spa Base to Back Wall: 11” (28 cm) – Refer to Installation Drawings for additional details.

Shipping Dimensions Including Skid: 68” L (173 cm) x 34” W (86 cm) x 44” H (112 cm)

Shipping Weight Including Skid: Simplicity SE – 220 lbs. (100 kg) / Simplicity LE – 250 lbs. (113 kg)

Shipping Dimensions (Carton Size): 84.0” L (213 cm) x 40.0” W (102 cm) x 44” H (112 cm)

Net Weight: Simplicity SE – 190 lbs. (86 kg) / Simplicity LE – 220 lbs. (100 kg)

Client Weight Capacity: 350 lbs. (160 kg)

Capacity of Removable Basin: 1.5 US Gallons (5.7 liters) – Water level is three (3) inches deep.

Power Requirements: 120V AC, 15 Amp, 60HZ. A separate and dedicated 15 Amp GFCI circuit **MUST** be used for each pedicure chair.

Construction: Welded steel frame with veneered wood panels that are completely sealed to prevent delamination.

Removable Basin: Highly chemical resistant ABS Plastic.

Heater/Massager Unit: Three (3) levels of vibration, three (3) levels of heat, ON and OFF, removable sanitary liners. All components of Heater/Massage Unit are industrial grade, manufactured exclusively for Continuum Footspas.

IMPORTANT: Your Pedicure Chair MUST be Installed by a Licensed Electrician and a Licensed Plumber in Accordance with all National, State and Local Codes/Regulations.

MESSAGE: Simplicity SE – Rolling and kneading only **OR** four (4) motor VibroMassage +Heat System. Either system is installed in back of chair; hand held control wand.

Simplicity LE – Full Function Shiatsu Back Massage with fold down manicure trays and hand held control wand.

CHAIR CONTROLS: Two (2) linear actuators electronically controlled with hand held wand. Forward/Backward/Recline.

Certification:

Heater/Massage Unit – ETL Listed



Chair – Underwriters Laboratories Listed



Compliance Listings to the following Standards: UL 1951, CAN/CSA C22.2 No. 68-92,

LIMITED WARRANTY: Please refer to **Limited Warranty** in Owner’s Manual. Visit our website at MyContinuumPedicure.com.

ACCESSORIES:

Deluxe Tech Chair: Base: 19” diameter (48 cm) Height range (excluding cushion): 12” to 15” (30.5 cm to 38 cm)

Net weight: 15 lbs. (7 kg)

Shipping Dimensions: 26” W (66 cm) x 26” L (66 cm) x 12” H (31 cm) Shipping Weight: 23 lbs. (11 kg)

Standard Tech Chair: Base: 18” diameter (46 cm) Height range (including cushion): 12” to 18” (30.5 cm to 38 cm)

Net weight: 13 lbs. (6 kg)

Shipping Dimensions: 22” W (56 cm) x 30” L (76 cm) x 10” H (25 cm) Shipping Weight: 15 lbs. (7 kg)

Accessory Cart: 16” L (40.6 cm) x 13” W (33 cm) x 17” H (43 cm)-Height is from floor to working surface. Net Weight: 28 lbs. (12.5 kg)

Shipping Dimensions: 21” W (53 cm) x 19” L (48 cm) x 23” H (58 cm) Shipping Weight: 37 lbs. (16.5 kg)

Note: Due to continuous improvements, all specifications are subject to change without notice. All dimensions and weights are approximate.

INSTALLATION AND ROUGH-IN INFORMATION

IMPORTANT - This sheet MUST accompany Installation Drawings

IMPORTANT: All Pedicure Chairs MUST be Installed by a Licensed Electrician and a Licensed Plumber in Accordance with all National, State and Local Codes/Regulations.

IMPORTANT: Special Installation Requirements Pertaining to the State of Wisconsin

Gravity Drain

Pedicure chairs installed in this manner (Gravity Drain) MUST be treated like a bathtub installation and connect directly to the fixture trap most likely below the floor. Approved couplings (i.e. Fernco or Clamp All) may be utilized.

Pump Discharge

The pump discharge MUST terminate into an approved receptor with an air break. An air gap is not required.

- Upper dimensions are in inches, lower dimensions [] are in centimeters.
- **DEPENDING ON THE USE OF MANICURE TRAYS AND/OR CARTS, THE EXACT DISTANCE BETWEEN PEDICURE CHAIRS WILL VARY GREATLY. THIS MUST BE DISCUSSED PRIOR TO ORDERING PEDICURE CHAIRS. THIS WILL ENSURE PROPER INSTALLATION AND ADEQUATE WORKING SPACE.** Please contact Continuum Footspas if additional information is required.
- **IMPORTANT! PLEASE DISCUSS FULL-CONCEALMENT SIDE PANELS WITH CUSTOMERS**
Curved side panels are standard on all non-fiberglass models. These standard panels allow for an “open look” underneath the spa base, but only conceal plumbing and/or electrical in the front and back portion of the pedicure base. When it is necessary to conceal most if not all connections, optional full-concealment side panels must be specified.
- When determining distance between back edge of unit and finished wall, it should be noted chair does recline. To ensure chair does not touch back wall, please review “Installation Drawings” for suggested minimum clearances.
- Electrical Requirements: One (1) dedicated 15 amp, GFCI protected wall outlet/circuit per unit located within two (2) feet of back edge of pedicure chair. (Actual draw is 5 amps) Each pedicure chair will be supplied with a standard four (4) foot grounded power cord. If utilizing an in-floor electrical box, position box underneath pedicure unit towards back of base. Please contact Continuum Footspas if additional information is required.
- Water Supply: One (1) each 1/2” hot and cold water supply. Locate shut-offs on the wall behind pedicure chair. (Suggested range 4” to 12” apart on center, 4” to 8” A.F.F. Shut-offs may be roughed in through the floor. Please contact Continuum Footspas for additional information.
- **INSTALLATION OF OPTIONAL DRAIN PUMP MUST BE NOTED ON ORIGINAL CUSTOMER ORDER. DRAIN PUMP MUST BE FACTORY INSTALLED.** If drain pump is utilized, use 1” OD X 3/4” ID discharge hose to connect unit to approved drain.

CONTINUUM FOOTSPAS LIMITED WARRANTY IS NULL AND VOID IF PEDICURE CHAIR IS NOT PROPERLY SECURED TO FINISHED FLOOR


ADDITIONAL INFORMATION REGARDING GRAVITY DRAIN INSTALLATIONS

- Always check with local plumbing inspectors for possible special requirements pertaining to pedicure chairs.
- Gravity drain is always preferred. If drain pump is NOT required, unit should be ordered WITHOUT drain pump.
- Gravity drain: Basin outlet is 1-1/2” PVC. Rough-in: 3” minimum diameter hub drain is recommended, 2” A.F.F.
- If Hot/Cold water lines are installed beneath finished floor, shut-offs should be located towards back portion of the unit.
Full Concealment side panels are Strongly Recommended



Note: Manicure Trays are standard on LE, optional on SE.

Cupholder Standard on SE.

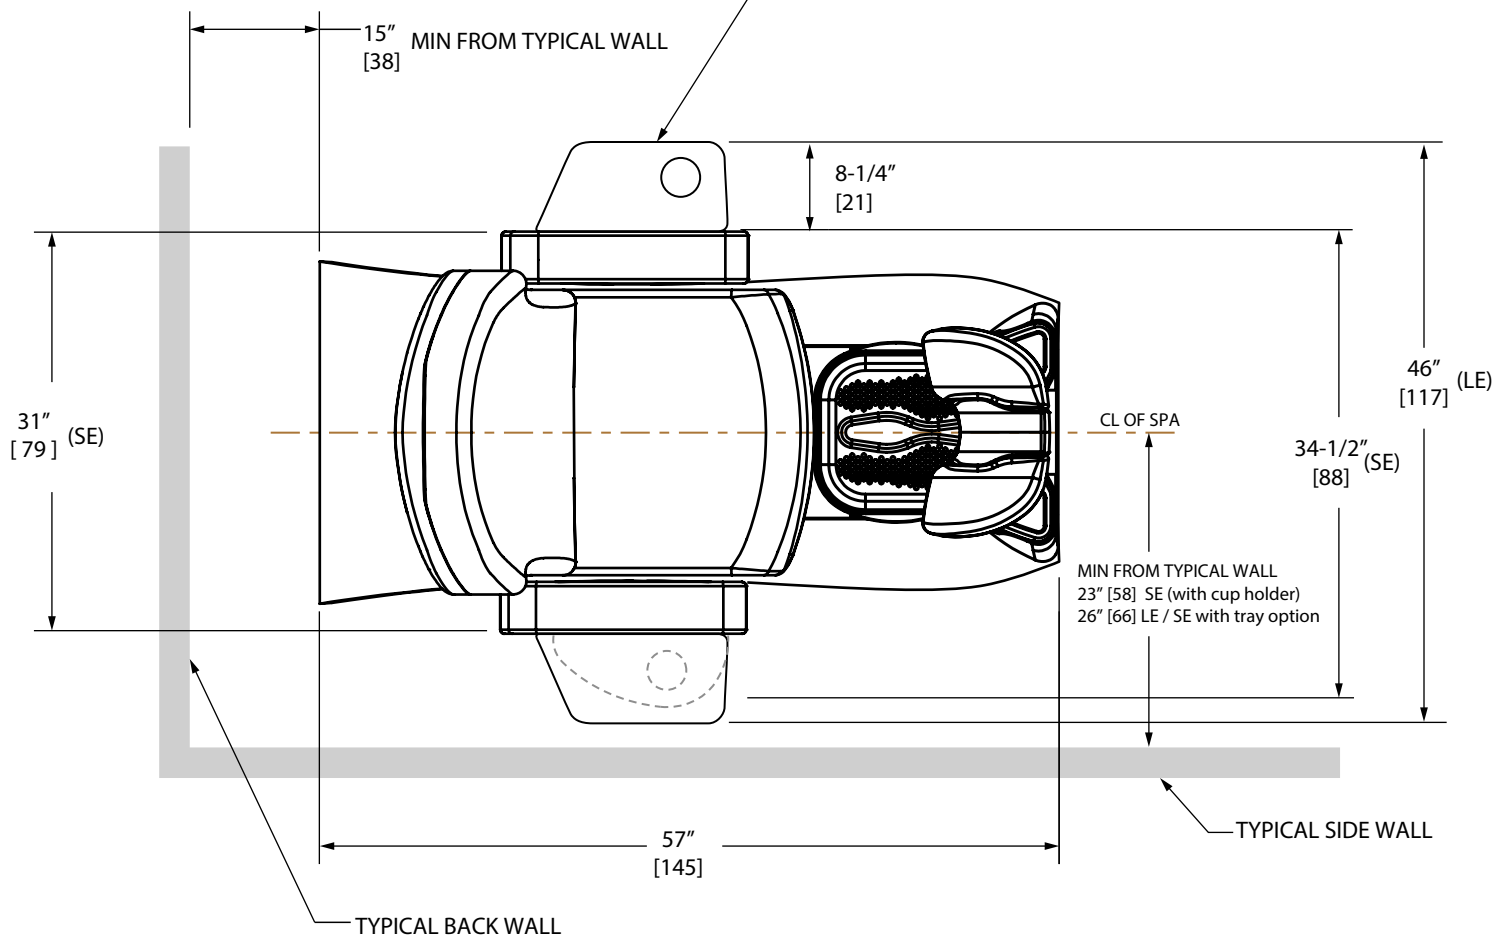

CONTINUUM FOOTSPAS

UPPER DIMENSIONS ARE IN INCHES
LOWER DIMENSIONS [] ARE IN CENTIMETERS